


ENTERPHONE 1000

OPENING DOORS TO THE FUTURE



AT THE TOUCH OF A BUTTON

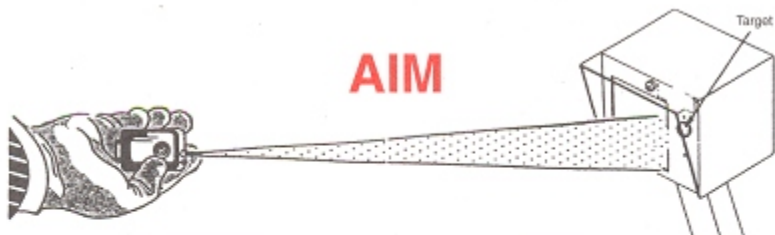

To operate. . . aim the **TRANSMITTER** at the **RECEIVER** and press the button.



TO REPLACE BATTERY

1. Unfasten screw and remove back cover.
2. Replace battery (12V alkaline - Duracell Mn 21 or equivalent) and replace back cover.

ENTER  **PHONE[®] 1000**

Manufactured by:

Viscount Communication & Control Systems Inc.

Phone: (604) 327-9446

Fax: (604) 327-3859

M600019/03


viscount
We Control Doors.